


GLEASON PowerTrak®

E-TYPE SPLICING INSTRUCTIONS

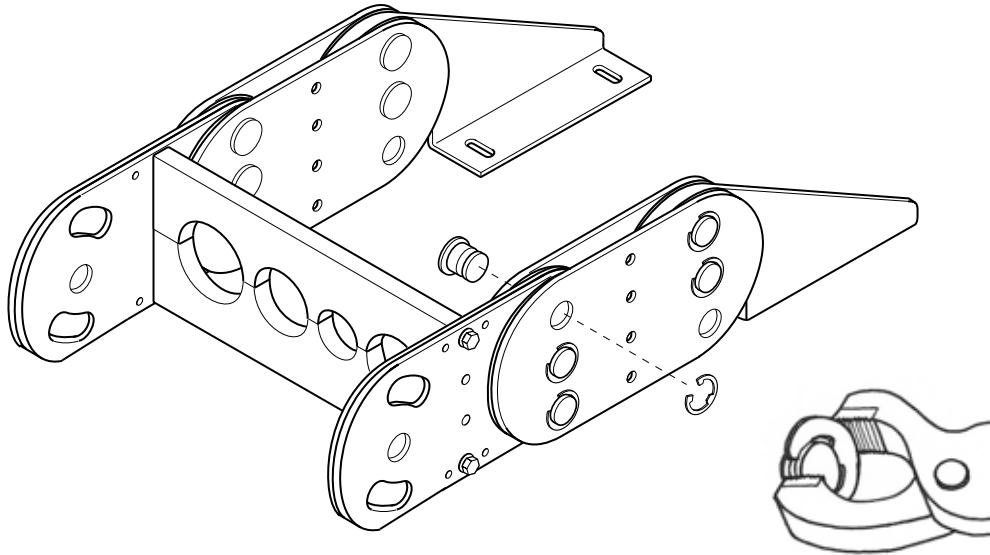

(Refer to Step 4)

STEPS:

1. Slide chains together to form a clevis.
2. Insert nylon discs at each joint between the outer link and inner link (2 per joint).
3. Insert hinge pins (3 per joint).
4. Slide one E-ring into the groove at the end of the Hinge Pin. Use a Channel-Lock Pliers to grip the OD of the E-ring and the Pin. Then squeeze the Pliers handles tightly until the E-ring “snaps” into the bottom of the groove. Be certain the middle “tab” on the E-ring is seated at the bottom of the groove.

TYPE	SPLICE KIT P/N
PT25E	034417
PT28E	034418
PT35E	034419
PT38E	034420
PT45E	034421
PT48E	034422

NOTE: Splice kits include (6) hinge pins, (4) anti-friction discs, and (12) E-ring fasteners



Gleason Reel Corp.
600 South Clark St. • P.O. Box 26
Mayville, WI 53050
Phone: 920-387-4120
Fax: 920-387-4189
www.hubbell-gleason.com